


Glass Substrate Thickness Demo Report

AcuiTik Technology
2026-06-24

Sample Description

- A total of ten coated samples on glass substrates were received: two multilayer-film samples, one bare-glass sample, and **seven single-layer-film samples**. The single-layer-film samples IDs and film-stack details are listed in the table below.
- For each sample, five points were measured (Up, Down, left, right, and center), as shown in the figure below.


ID	Details	Reference Thickness (nm)
4	Si ₃ N ₄	15~30
6	ZnO	8~16
8	Ag	10~14
10	NiCrOx	1~2
12	ZnO	7~13
14	SiOxNy	25~40
16	Nb ₂ O ₅	2~4
	Glass	3.85 mm
1	multilayer-film	
2	multilayer-film	

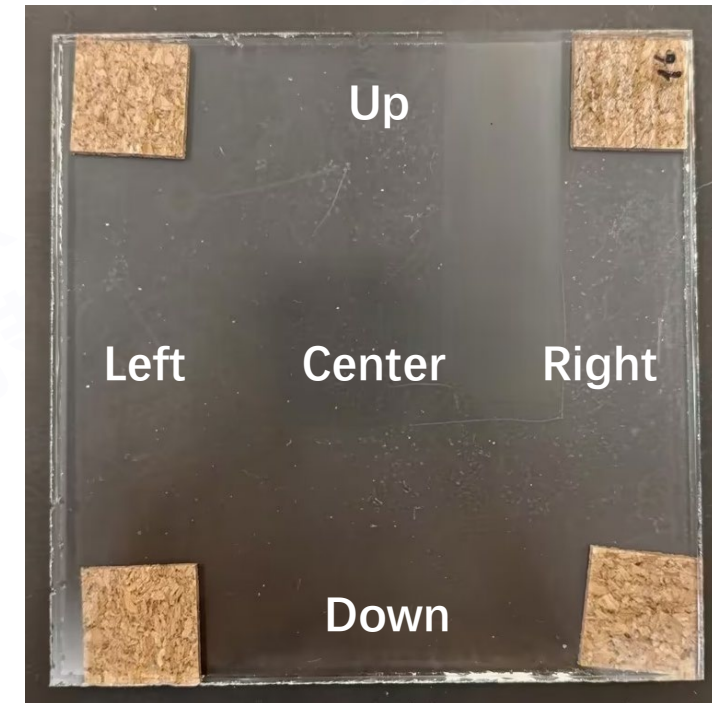

Software UI Overview

Control Panel

Recipe Selection

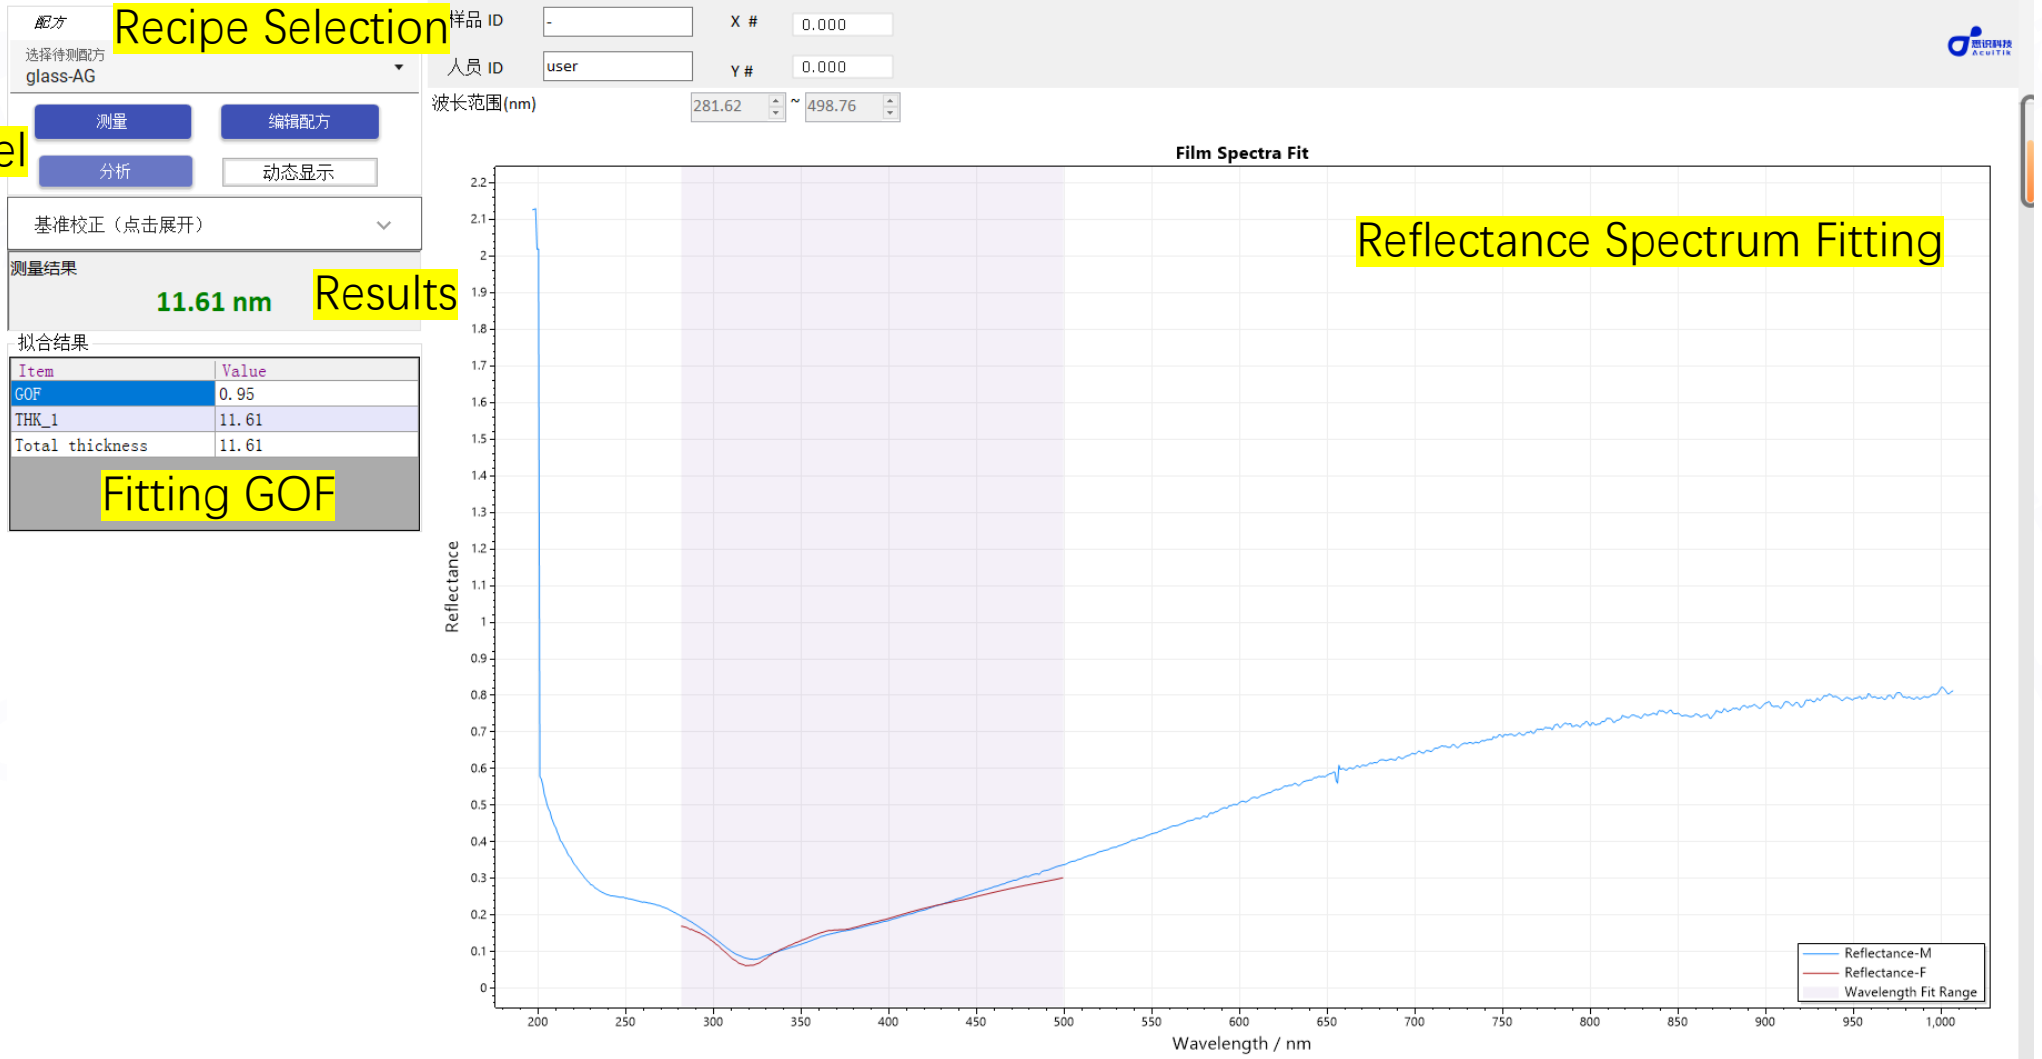


Measurement Results - single-layer-film

- The reported measurement result is given as the range across the five measurement points (Up, Down, left, right, and center)

ID	Details	Measurement Results (nm)	Reference Thickness (nm)
4	Si3N4	6.31~14.14	15~30
6	ZnO	11.36~13.02	8~16
8	Ag	10.6~11.51	10~14
10	NiCrOx	1.2~3.62	1~2
12	ZnO	13.18~15.67	7~13
14	SiOxNy	37.49~49.75	25~40
16	Nb2O5	1.39~2.56	2~4

Static Repeatability (30 repeats on single site)

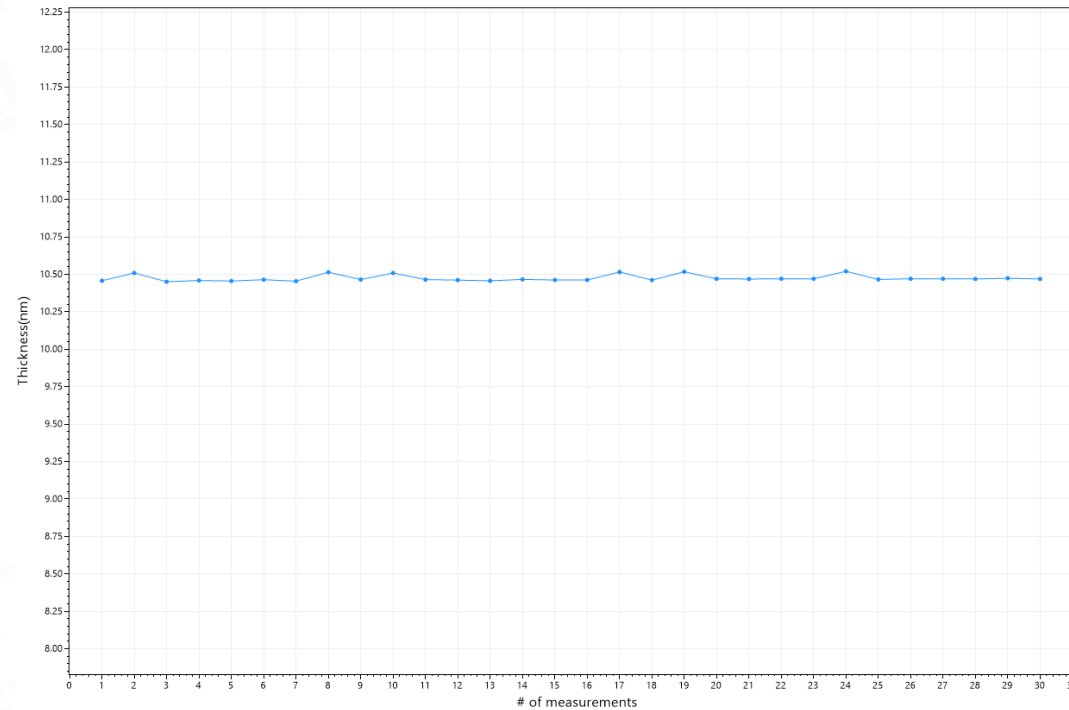


Eval Metrics	GOF	THK_1
Average	0.91	10.47
Max	0.92	10.52
Min	0.91	10.45
Std. Dev.	0	0.02
Range	0.01	0.07

1-sigma

Measurement Results - multilayer-film

Layout	Details	Sample 1 Results(nm)	Sample 2 Results(nm)	Reference Thickness (nm)
7th layer	Nb2O5	3.55	3.63	2~4
6th layer	SiOxNy	3.46	4.9	25~40
5th layer	ZnO	32.16	28.61	7~13
4th layer	NiCrOx	0.4	1.77	1~2
3rd layer	Ag	9.96	14.56	10~14
2nd layer	ZnO	16.32	9.77	8~16
1st layer	Si3N4	12.28	18.85	15~30

Measurement Results - multilayer-film

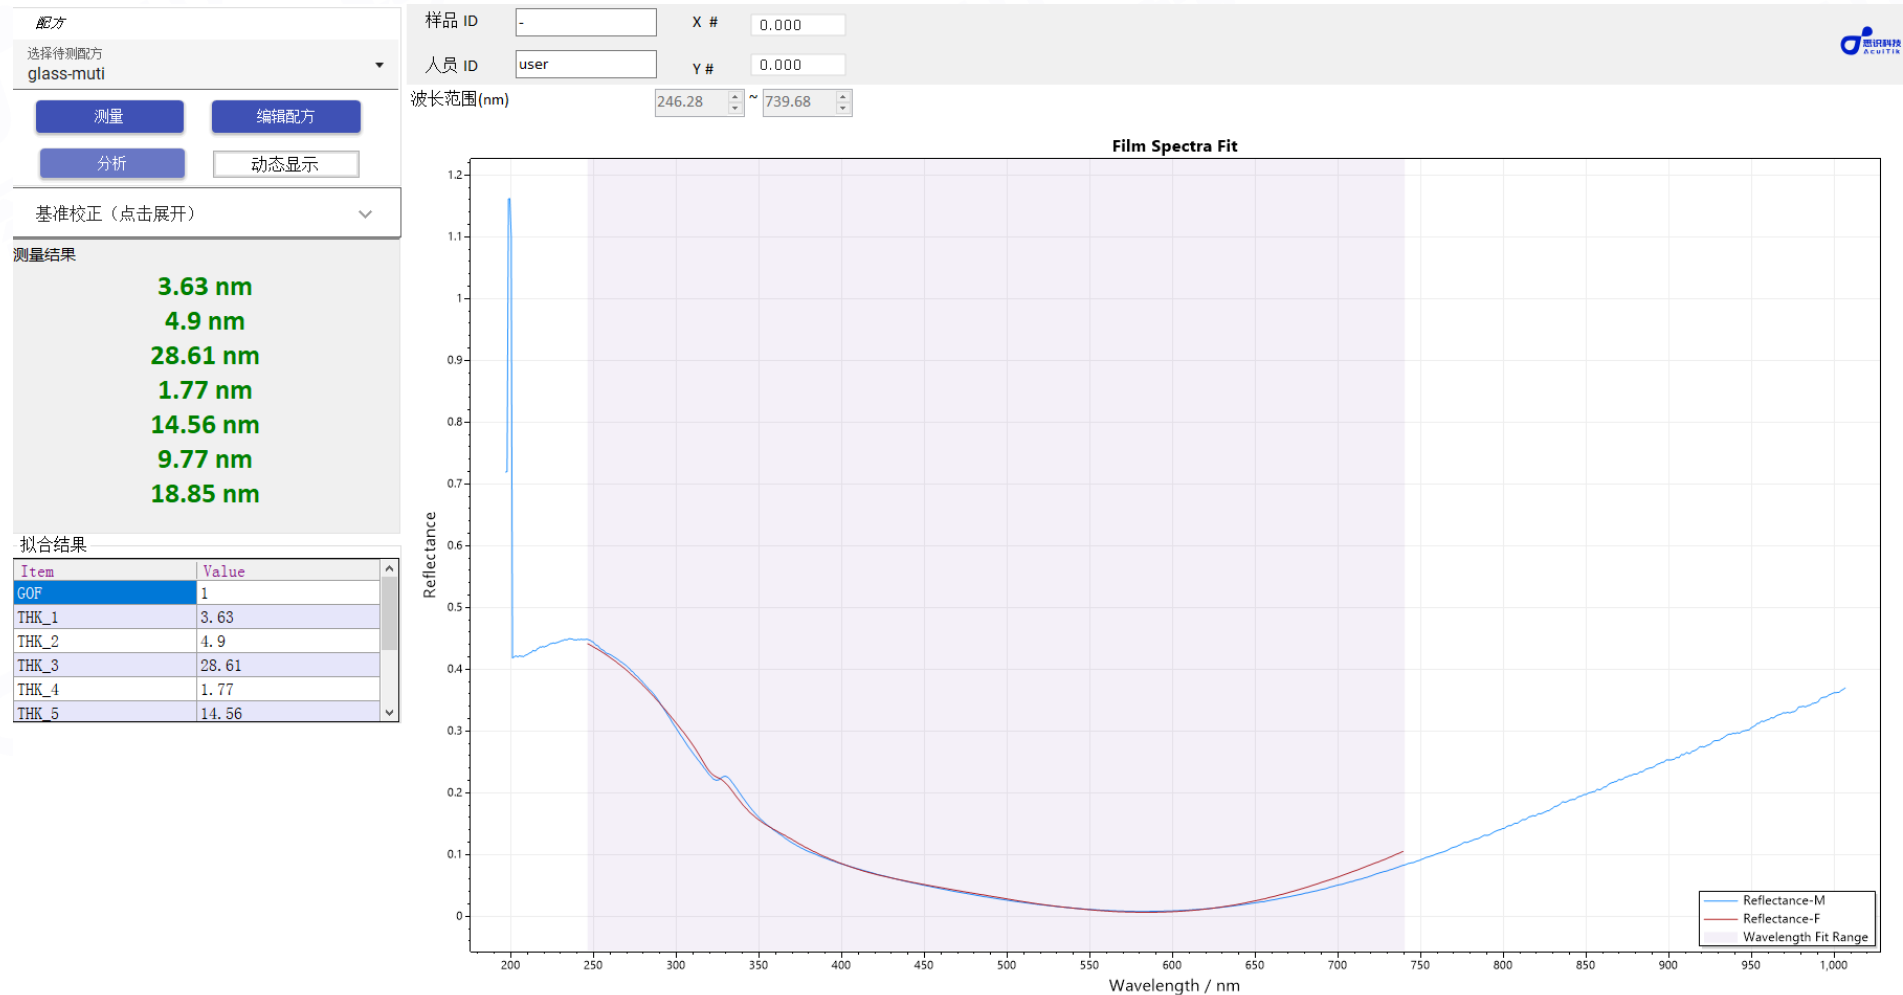

Thanks!

About Acuitik Co. (Suzhou), Ltd.

Acuitik Co. (Suzhou), Ltd. was founded by several doctors and masters from UC Berkeley, Fudan University, Shanghai Jiao Tong University, Shanghai University of Science and Technology, and other institutions. We have been deeply engaged in semiconductor equipment, intelligent manufacturing, and high-precision measurement technology for many years, possessing rich experience in research and development and industry.

Advantages of choosing Acuitik:

- **Expert team in thin film thickness measurement**
- **Customized application development for users**
- **Comprehensive material library**
- **24-hour phone, E-mail, and online support**
- **Intuitive and user-friendly software**

Contact us: info@acuitik.com

Website: www.acuitik.com

Copyright Notice

All content in this report, including but not limited to text, images, charts, data, and design, is the intellectual property of Acuitik Co. (Suzhou), Ltd.. Without the explicit written permission of the company, no individual or entity may copy, reproduce, publish, or use in any form all or part of the content of this report. Violations of the above provisions will be subject to strict legal pursuit.

Copyright 2026 © Acuitik Co. (Suzhou), Ltd. All rights reserved.

Contact us: info@acuitik.com

Website: www.acuitik.com